

# Suspension Parts & Poly Bushings for VW JETTA 2010-2018 - Mk 6 Typ 162, 163

## Parts Application Diagrams


### Macpherson Strut

With Separate Control Arm



### Double Control Arm With Spring & Shock

With Upper Wishbone & Lower Arm

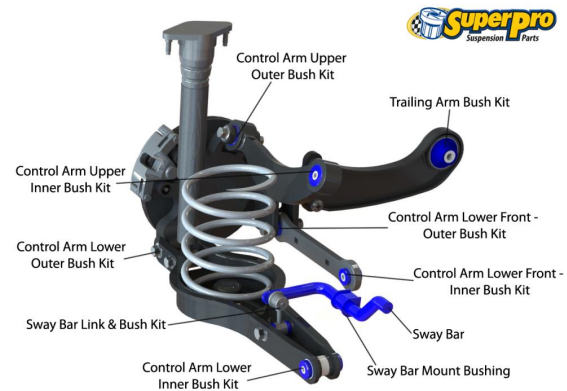

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Ball Joint - Camber Adjustable	<a href="#">TRC0003</a>	1	Roll Control
Front	Control Arm Lower Complete Alloy Assembly Left and Right Performance Arm Kit with Anti lift and Caster increase	<a href="#">ALOY0001K</a>	1	Roll Control
Front	Control Arm Lower-Inner Front Bush Kit	<a href="#">SPF3346K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Anti Lift Bracket Mount Kit Left and Right Performance Bracket Kit with Anti lift and Caster increase	<a href="#">ALOY3273-80K</a>	1	Roll Control
Front	Control Arm Lower-Inner Rear Anti Lift Bracket Mount Kit Left and Right High Performance Bracket Kit with Anti lift and Caster increase	<a href="#">ALOY3273-90K</a>	1	Roll Control
Front	Control Arm Lower-Inner Rear Bush & Bracket Kit Standard Replacement for Repair and Repair Upgrade	<a href="#">SPF4952K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Standard Replacement	<a href="#">SPF4176K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit - Double Offset Double Caster Offset	<a href="#">SPF4178K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit - Single Offset Single Caster Offset	<a href="#">SPF4177K</a>	1	SuperPro SPF
Front	Sway Bar Link Standard Replacement	<a href="#">TRC4048</a>	2	Roll Control
Front	Sway Bar Mount Bush Kit	<a href="#">SPF3354-22.5K</a>	1	SuperPro SPF
Front	Torque Arm Lower Insert Bush Kit Suits Diesel Engine only OEM 1KO 199 867A	<a href="#">SPF2861-70K</a>	1	SuperPro SPF
Front	Torque Arm Lower Insert Bush Kit Sports Kit; Suits OEM Part Number: 1KO199867A; Gearbox mount.	<a href="#">SPF2861-80K</a>	1	SuperPro SPF
Front	Torque Arm Lower Insert Bush Kit Competition Kit; Suits OEM Part Number: 1KO199867A; Gearbox mount.	<a href="#">SPF2861-90K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Front Outer Bush Kit	<a href="#">SPF3351-90K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Front Outer Bush Kit	<a href="#">SPF3351K</a>	1	SuperPro SPF

Rear	Control Arm Lower-Inner Front Bush Kit	<a href="#">SPF3350-90K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Inner Front Bush Kit	<a href="#">SPF3350K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Rear Inner Bush Kit	<a href="#">SPF3352K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Rear Outer Bush Kit	<a href="#">SPF3353K</a>	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit	<a href="#">SPF3348K</a>	1	SuperPro SPF
Rear	Control Arm Upper-Outer Bush Kit	<a href="#">SPF3349K</a>	1	SuperPro SPF
Rear	Sway Bar Link Standard Replacement	<a href="#">TRC4050</a>	2	Roll Control
Rear	Sway Bar Link Kit - Heavy Duty Adjustable	<a href="#">TRC1045L</a>	1	Roll Control
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF3355-18K</a>	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit	<a href="#">SPF3347-70K</a>	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit	<a href="#">SPF3347-80K</a>	1	SuperPro SPF