


Suspension Parts & Poly Bushings for VOLVO S80 2006-2016 - AS

Parts Application Diagrams


Macpherson Strut

With Separate Control Arm

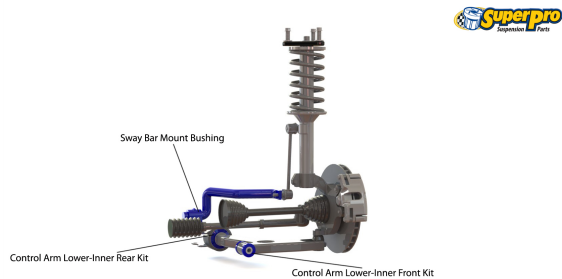

Generic Diagram

For illustrative purposes only

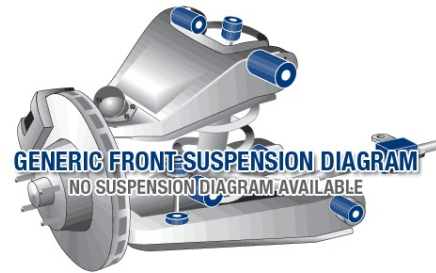

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower Inner-Rear Bush Kit Standard Replacement	SPF4695K	1	SuperPro SPF
Front	Control Arm Lower Inner-Rear Bush Kit - Double Offset Alignment Correction. Caster Adjustment	SPF4700K	1	SuperPro SPF
Front	Control Arm Lower Inner-Rear Bush Kit - Single Offset Alignment Correction. Use this kit to correct a slight pull	SPF4699K	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit	SPF4694K	1	SuperPro SPF
Front	Sway Bar Link Cut To Length Link	TRC4004	2	Roll Control
Front	Sway Bar Link Standard Replacement	TRC4025	2	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable	TRC10245	1	Roll Control