


# Suspension Parts & Poly Bushings for MERCEDES-BENZ A-CLASS 2012-2018 - W176

## Parts Application Diagrams

### Macpherson Strut

With Separate Control Arm

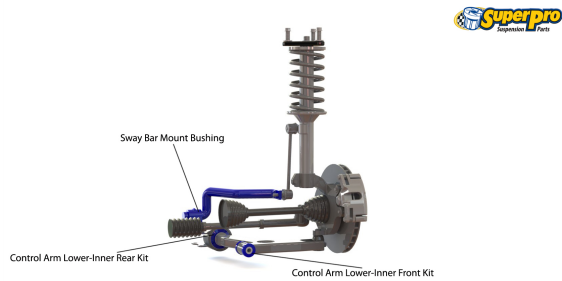

### Complex Multi Link

With Trailing Link And Coil Seat



## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Sway Bar Link Kit - Heavy Duty Adjustable	<a href="#">TRC12245</a>	1	Roll Control
Front	Sway Bar Mount Bush Kit	<a href="#">SPF4381-28K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF4382-23K</a>	1	SuperPro SPF