


Suspension Parts & Poly Bushings for HSV COMMODORE 1978-1989 - VB, VC, VH, VK, VL

Parts Application Diagrams


Macpherson Strut

With Lower Control Arm And Separate Radius Rod

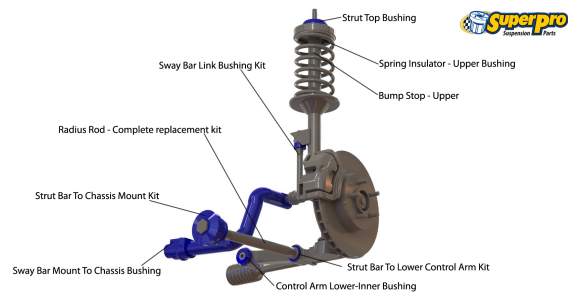

Coil Spring Solid Axle

With Panhard Rod And Trailing Arms

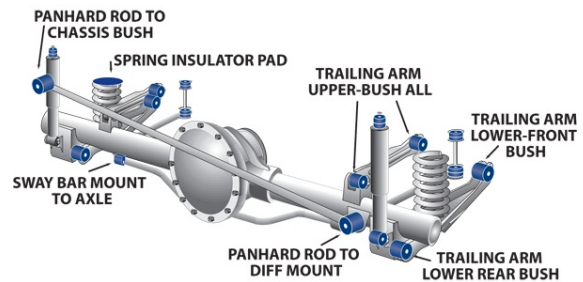

Available SuperPro Parts

| Position | Part Name | Part No. | Qty/Car | Sub Brand |
|----------|--|-----------------------------|---------|--------------|
| Front | 27mm Heavy Duty 4 Position Blade Adjustable Sway Bar | SHF16A | 1 | Roll Control |
| Front | Bump Stop Bush Kit - Upper SuperPro Polyurethane Heavy Duty front strut bump stop | SPF0189K | 1 | SuperPro SPF |
| Front | Control Arm Lower-Inner Bush Kit | SPF0251K | 1 | SuperPro SPF |
| Front | Spring Insulator Bush Kit Upper replacement of OEM 92002882 | SPF2498K | 1 | SuperPro SPF |
| Front | Steering Rack & Pinion Repair Kit Manual steering only, VB, VC, VH, VK | KIT025K | 1 | Vehicle Kits |
| Front | Steering Rack & Pinion Shaft Guide (Manual Steering) VB, VC, VH & VK only | SPF0926K | 1 | SuperPro SPF |
| Front | Strut Bar Fixed +2.0° Strut bar only, use SPF0240K, SPF0756K | SPF1630K | 1 | SuperPro SPF |
| Front | Strut Bar To Chassis Mount Bush Kit | SPF0240-90K | 1 | SuperPro SPF |
| Front | Strut Bar To Chassis Mount Bush Kit | SPF0240K | 1 | SuperPro SPF |
| Front | Strut Bar To Lower Control Arm Bush Kit | SPF0756K | 1 | SuperPro SPF |
| Front | Strut Brace V6 Engines only | FPB-001 | 1 | Roll Control |
| Front | Strut Brace V8 Engines only | FPB-002 | 1 | Roll Control |
| Front | Strut Top Bush Kit | SPF0985K | 1 | SuperPro SPF |
| Front | Sway Bar Link Bush Kit | SPF2092BK | 1 | SuperPro SPF |
| Front | Sway Bar Link Rod Kit H/Duty conversion link rod & bushing replacement kit for "after-market" swaybar | SPF0967K | 1 | SuperPro SPF |
| Front | Sway Bar Link Rod Kit H/Duty conversion link rod & bushing replacement kit for "original" swaybar | SPF0968K | 1 | SuperPro SPF |
| Front | Sway Bar Mount Bush Kit | SPF1453-27K | 1 | SuperPro SPF |

| | | | | |
|-------|--|-----------------------------|---|--------------|
| Front | Sway Bar Mount Bush Kit | SPF1453-28K | 1 | SuperPro SPF |
| Front | Sway Bar Mount Bush Kit | SPF1453-30K | 1 | SuperPro SPF |
| Rear | Panhard Rod Bush Kit | SPF0030K | 1 | SuperPro SPF |
| Rear | Panhard Rod Bush Kit Fits "Fulcrum Formula" adjustable panhard rod only | SPF1051K | 1 | SuperPro SPF |
| Rear | Rear End Repair Kit Standard Replacement | KIT061RK | 1 | Vehicle Kits |
| Rear | Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 12mm | SPF0385-10K | 2 | SuperPro SPF |
| Rear | Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 6mm | SPF0385-5K | 2 | SuperPro SPF |
| Rear | Spring Insulator Bush Kit Solid axle, standard height vehicle | SPF0385K | 2 | SuperPro SPF |
| Rear | Sway Bar Link Bush Kit | SPF2092K | 1 | SuperPro SPF |
| Rear | Sway Bar Mount Bush Kit | SPF0589-21K | 1 | SuperPro SPF |
| Rear | Sway Bar Mount Bush Kit | SPF0589-22K | 1 | SuperPro SPF |
| Rear | Trailing Arm Lower-Front Bush Kit | SPF0016-80K | 1 | SuperPro SPF |
| Rear | Trailing Arm Lower-Front Bush Kit | SPF0016-90K | 1 | SuperPro SPF |
| Rear | Trailing Arm Lower-Front Bush Kit | SPF0016K | 1 | SuperPro SPF |
| Rear | Trailing Arm Lower-Rear Bush Kit | SPF0017-80K | 1 | SuperPro SPF |
| Rear | Trailing Arm Lower-Rear Bush Kit | SPF0017-90K | 1 | SuperPro SPF |
| Rear | Trailing Arm Lower-Rear Bush Kit | SPF0017K | 1 | SuperPro SPF |
| Rear | Trailing Arm Upper Bush Kit | SPF0255-90K | 1 | SuperPro SPF |
| Rear | Trailing Arm Upper Bush Kit | SPF0255K | 1 | SuperPro SPF |
| Rear | Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application | SPF0977-70K | 1 | SuperPro SPF |
| Rear | Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application | SPF0977-80K | 1 | SuperPro SPF |
| Rear | Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application | SPF0977-90K | 1 | SuperPro SPF |