


Suspension Parts & Poly Bushings for HSV GRANGE 1993-1997 - VR-VS

Parts Application Diagrams


Macpherson Strut

With Lower Control Arm And Radius Rod

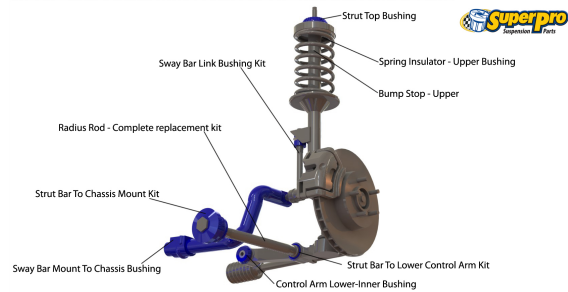

Complex IRS For Rwd

With "Wishbone" Style Lower Trailing Arm

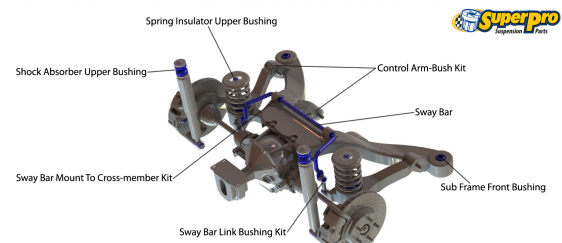

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	27mm Heavy Duty Non Adjustable Sway Bar	SHF17	1	Roll Control
Front	30mm Heavy Duty 3 Position Blade Adjustable Sway Bar	SHF17A	1	Roll Control
Front	30mm Heavy Duty Non Adjustable Sway Bar	SHF17C	1	Roll Control
Front	Alignment Bush Kit - Front End	KIT152K	1	Vehicle Kits
Front	Bump Stop Kit	SPF1833BK	1	SuperPro SPF
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degree Camber	SPF4351-14K	1	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-10K	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-5K	2	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit	SPF0842K	1	SuperPro SPF
Front	Spring Insulator Bush Kit Upper replacement of OEM 92002882	SPF2498K	1	SuperPro SPF
Front	Strut Bar Fixed +2.0° Strut bar only, use SPF0240K, SPF0756K	SPF1630K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	SPF0240-90K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	SPF0240K	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit	SPF0756CK	1	SuperPro SPF
Front	Strut Bolt Replacement Kit	SPF4960K	2	SuperPro SPF
Front	Strut Brace	FPB-003	1	Roll Control
Front	Strut Top & Bearing	SPF1590AK	1	SuperPro SPF
Front	Strut Top & Bearing	SPF1590BK	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Bushes only to suit after-market sway bar & SPF0987K	SPF0994K	1	SuperPro SPF
Front	Sway Bar Link to Strut Kit	SPF0987K	1	SuperPro SPF

H/Duty link rod replacement & bushing kit

Front	Sway Bar Mount Bush Kit	SPF1453-27K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-28K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-30K	1	SuperPro SPF
Rear	22mm Heavy Duty 4 Point Adjustable Sway Bar Kit suits vehicles with factory fitted sway bars	SHR16A	1	Roll Control
Rear	Bump Stop Bush Kit - Shortened Suit lowered suspension "Use with OE Foam bump stop"	SPF0601K	1	SuperPro SPF
Rear	Bump Stop Bush Kit - Shortened Suit Extra lowered suspension "Remove OE Foam"	SPF0601SLK	1	SuperPro SPF
Rear	Control Arm Bush Kit IRS Independent Rear Suspension	SPF0611K	2	SuperPro SPF
Rear	Crossmember Supplement Washers Bush Kit	SPF0840K	1	SuperPro SPF
Rear	Differential Mount Insert	SPF4170K	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit	SPF0877FK	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit	SPF0877K	1	SuperPro SPF
Rear	IRS Adjusting Kit Toe Only Bush Kit	SPF0877TK	1	SuperPro SPF
Rear	IRS Bush Kit Removal Tool Specialised tool for removal of OE bushings	SPF3211K	1	SuperPro SPF
Rear	IRS Fixed Camber & Adjustable Toe Kit	SPF0877ZK	1	SuperPro SPF
Rear	Panhard Rod on car adjustable	TRC1107	1	Roll Control
Rear	Panhard Rod Bush Kit Solid axle rear	SPF0030K	1	SuperPro SPF
Rear	Panhard Rod Bush Kit Fits "Fulcrum Formula" adjustable panhard rod only	SPF1051K	1	SuperPro SPF
Rear	Rear End Repair Kit Standard Replacement	KIT061RK	1	Vehicle Kits
Rear	Shock Absorber Upper Bush Kit Solid & IRS axle	SPF0201K	1	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 12mm	SPF0385-10K	2	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 6mm	SPF0385-5K	2	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle, standard height vehicle	SPF0385K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 15mm	SPF1358-10K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 9mm	SPF1358-6K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 12mm	SPF1358-8K	2	SuperPro SPF
Rear	Subframe Front Bush Kit Standard Replacement Kit	SPF3267K	1	SuperPro SPF
Rear	Subframe Front Bush Kit Competition/Race Kit	SPF3367K	1	SuperPro SPF
Rear	Sway Bar Link and Bush Kit	SPF2966BK	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit	SPF2092K	1	SuperPro SPF
Rear	Sway Bar Link Lower Bush Kit IRS Independent Rear Suspension	SPF0513-4K	1	SuperPro SPF
Rear	Sway Bar Link Upper Bush Kit IRS Independent Rear Suspension	SPF1943K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Solid axle rear	SPF0589-21K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Solid axle rear	SPF0589-22K	1	SuperPro SPF

Rear	Sway Bar Mount To Crossmember Bush Kit IRS	SPF0613-18K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit IRS	SPF0613-19K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit IRS	SPF0613-20K	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit Solid axle rear	SPF0016-80K	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit Solid axle rear	SPF0016-90K	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit Solid axle rear	SPF0016K	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Solid axle rear	SPF0017-80K	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Solid axle rear	SPF0017-90K	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Solid axle rear	SPF0017K	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Solid axle rear	SPF0255-90K	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Solid axle rear	SPF0255K	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application	SPF0977-70K	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application	SPF0977-80K	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application	SPF0977-90K	1	SuperPro SPF