


# Suspension Parts & Poly Bushings for HSV CLUBSPORT 2000-2002 - VX

## Parts Application Diagrams


### Macpherson Strut

With Lower Control Arm And Radius Rod

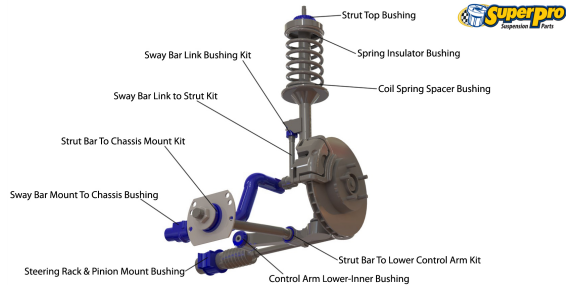

### Complex IRS For Rwd

With "Wishbone" Style Lower Trailing Arm

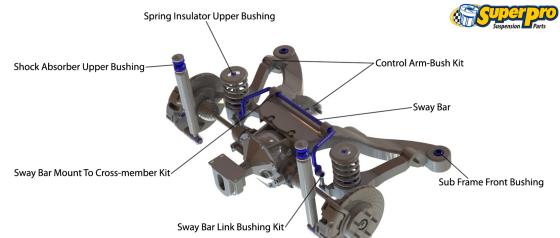

## Available SuperPro Parts

| Position | Part Name   | Part No.                    | Qty/Car | Sub Brand    |
|----------|---|-----------------------------|---------|--------------|
| Front    | 30mm Heavy Duty 3 Position Blade Adjustable Sway Bar  | <a href="#">SHF14A</a>      | 1       | Roll Control |
| Front    | Alignment Bush Kit - Front End  | <a href="#">KIT153K</a>     | 1       | Vehicle Kits |
| Front    | Camber Adjusting Bolt Kit<br>Adds +/- 1.5 Degree Camber   | <a href="#">SPF4351-14K</a> | 1       | SuperPro SPF |
| Front    | Coil Spring Spacer Bush Kit   | <a href="#">SPF2365-10K</a> | 2       | SuperPro SPF |
| Front    | Coil Spring Spacer Bush Kit   | <a href="#">SPF2365-5K</a>  | 2       | SuperPro SPF |
| Front    | Control Arm Lower Assembly Kit<br>Left and Right Arms for Standard Replacement and Repair Upgrade                       | <a href="#">TRC1104</a>     | 1       | Roll Control |
| Front    | Control Arm Lower-Inner Bush Kit  | <a href="#">SPF1232K</a>    | 1       | SuperPro SPF |
| Front    | Steering Rack & Pinion Mount Bush Kit   | <a href="#">SPF1632K</a>    | 1       | SuperPro SPF |
| Front    | Strut Bar To Chassis Mount Bush Kit   | <a href="#">SPF2339-90K</a> | 1       | SuperPro SPF |
| Front    | Strut Bar To Chassis Mount Bush Kit   | <a href="#">SPF2339K</a>    | 1       | SuperPro SPF |
| Front    | Strut Bar To Lower Control Arm Bush Kit   | <a href="#">SPF0756CK</a>   | 1       | SuperPro SPF |
| Front    | Strut Bolt Replacement Kit  | <a href="#">SPF4960K</a>    | 2       | SuperPro SPF |
| Front    | Strut Brace   | <a href="#">FPB-004</a>     | 1       | Roll Control |
| Front    | Strut Top & Bearing   | <a href="#">SPF1590AK</a>   | 1       | SuperPro SPF |
| Front    | Strut Top & Bearing   | <a href="#">SPF1590BK</a>   | 1       | SuperPro SPF |
| Front    | Sway Bar Link   | <a href="#">TRC4003</a>     | 2       | Roll Control |
| Front    | Sway Bar Link Bush Kit<br>Strut end only, Vehicle has ball joint type end at sway bar, must re-use all original washers | <a href="#">SPF2755SK</a>   | 1       | SuperPro SPF |
| Front    | Sway Bar Link Kit   | <a href="#">SPF3570K</a>    | 1       | SuperPro SPF |
| Front    | Sway Bar Link Rod Replacement Bush Kit  | <a href="#">SPF0967RK</a>   | 1       | SuperPro SPF |

|                |  |                             |   |              |
|----------------|--|-----------------------------|---|--------------|
| Front          | Sway Bar Mount Bush Kit  | <a href="#">SPF1453-28K</a> | 1 | SuperPro SPF |
| Front          | Sway Bar Mount Bush Kit  | <a href="#">SPF1453-30K</a> | 1 | SuperPro SPF |
| Front and Rear | Enhancement Bush Kit suits Series 1  | <a href="#">KIT138K</a>     | 1 | Vehicle Kits |
| Rear           | 18mm Heavy Duty 2 Position Blade Adjustable Sway Bar                                     | <a href="#">SHR50A</a>      | 1 | Roll Control |
| Rear           | Bump Stop Bush Kit - Upper   | <a href="#">SPF3906K</a>    | 1 | SuperPro SPF |
| Rear           | Control Arm Bush Kit<br>only one kit required if SPF2545K is fitted                      | <a href="#">SPF0611K</a>    | 2 | SuperPro SPF |
| Rear           | Crossmember Supplement Washers Bush Kit  | <a href="#">SPF0840K</a>    | 1 | SuperPro SPF |
| Rear           | Differential Mount Insert suits Series 1   | <a href="#">SPF4170K</a>    | 1 | SuperPro SPF |
| Rear           | Differential Mount Insert suits Series 2   | <a href="#">SPF4171K</a>    | 1 | SuperPro SPF |
| Rear           | IRS Adjusting Camber & Toe Kit<br>Suited to vehicles without "Factory Toe Adjusting Arm" | <a href="#">SPF0877FK</a>   | 1 | SuperPro SPF |
| Rear           | IRS Adjusting Camber & Toe Kit   | <a href="#">SPF0877K</a>    | 1 | SuperPro SPF |
| Rear           | IRS Adjusting Camber Only Kit  | <a href="#">SPF2545K</a>    | 1 | SuperPro SPF |
| Rear           | IRS Adjusting Kit Toe Only Bush Kit  | <a href="#">SPF0877TK</a>   | 1 | SuperPro SPF |
| Rear           | IRS Bush Kit Removal Tool<br>Specialised tool for removal of OE bushings                 | <a href="#">SPF3211K</a>    | 1 | SuperPro SPF |
| Rear           | IRS Fixed Camber & Adjustable Toe Kit  | <a href="#">SPF0877ZK</a>   | 1 | SuperPro SPF |
| Rear           | Shock Absorber Upper Bush Kit  | <a href="#">SPF0201K</a>    | 1 | SuperPro SPF |
| Rear           | Spring Insulator Lower Bush Kit<br>IRS Raises vehicle approximately 15mm                 | <a href="#">SPF1358-10K</a> | 2 | SuperPro SPF |
| Rear           | Spring Insulator Lower Bush Kit<br>IRS Raises vehicle approximately 9mm                  | <a href="#">SPF1358-6K</a>  | 2 | SuperPro SPF |
| Rear           | Spring Insulator Lower Bush Kit<br>IRS Raises vehicle approximately 12mm                 | <a href="#">SPF1358-8K</a>  | 2 | SuperPro SPF |
| Rear           | Subframe Front Bush Kit<br>Standard Replacement Kit                                      | <a href="#">SPF3267K</a>    | 1 | SuperPro SPF |
| Rear           | Subframe Front Bush Kit<br>Competition/Race Kit  | <a href="#">SPF3367K</a>    | 1 | SuperPro SPF |
| Rear           | Sway Bar Link Bush Kit   | <a href="#">SPF0513K</a>    | 1 | SuperPro SPF |
| Rear           | Sway Bar Link Kit  | <a href="#">TRC4088</a>     | 1 | Roll Control |
| Rear           | Sway Bar Mount To Crossmember Bush Kit   | <a href="#">SPF0613-14K</a> | 1 | SuperPro SPF |
| Rear           | Sway Bar Mount To Crossmember Bush Kit   | <a href="#">SPF0613-18K</a> | 1 | SuperPro SPF |
| Rear           | Sway Bar Mount To Crossmember Bush Kit   | <a href="#">SPF0613-19K</a> | 1 | SuperPro SPF |
| Rear           | Sway Bar Mount To Crossmember Bush Kit   | <a href="#">SPF0613-20K</a> | 1 | SuperPro SPF |