


Suspension Parts & Poly Bushings for HOLDEN CAPRICE 1990 - 1999 - VQ-VS

Parts Application Diagrams

Generic Diagram

For illustrative purposes only

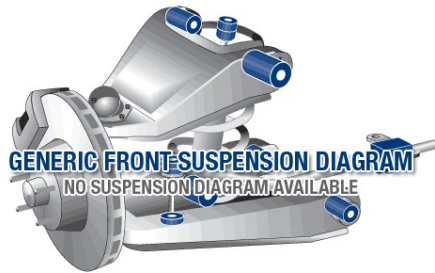

Generic Diagram

For illustrative purposes only



Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	27mm Heavy Duty 4 Position Blade Adjustable Sway Bar suits VQ	SHF16A	1	Roll Control
Front	Alignment Bush Kit - Front End VQ Only	KIT151K	1	Vehicle Kits
Front	Alignment Bush Kit - Front End VR, VS	KIT152K	1	Vehicle Kits
Front	Bump Stop Bush Kit - Upper SuperPro Polyurethane Heavy Duty front strut bump stop	SPF0189K	1	SuperPro SPF
Front	Bump Stop Kit	SPF1833BK	1	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-10K	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-5K	2	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit	SPF0251K	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit	SPF0842K	1	SuperPro SPF
Front	Spring Insulator Bush Kit Upper replacement of OEM 92002882	SPF2498K	1	SuperPro SPF
Front	Strut Bar Fixed +2.0 Degree Strut bar only, use SPF0240K,SPF0756K	SPF1630K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit VQ Only Heavy Duty	SPF0240-90K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit VQ Only	SPF0240K	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit	SPF0756CK	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit	SPF0756K	1	SuperPro SPF
Front	Strut Bolt Replacement Kit	SPF4960K	2	SuperPro SPF
Front	Strut Top & Bearing does not suit VQ	SPF1590AK	1	SuperPro SPF
Front	Strut Top & Bearing does not suit VQ	SPF1590BK	1	SuperPro SPF

Front	Strut Top Bush Kit	SPF0986K	1	SuperPro SPF
Front	Sway Bar Link and Bush Kit	SPF2966BK	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Bushes only to suit after-market sway bar & SPF987K	SPF0994K	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Original sway bar	SPF2755SK	1	SuperPro SPF
Front	Sway Bar Link Rod Kit H/Duty conversion link rod & bushing replacement kit for "after-market" swaybar	SPF0967K	1	SuperPro SPF
Front	Sway Bar Link Rod Kit H/Duty conversion link rod & bushing replacement kit for "original" swaybar	SPF0968K	1	SuperPro SPF
Front	Sway Bar Link Rod Kit H/Duty link rod & bushing replacement, fits from original swaybar to strut leg	SPF0987K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-26K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-27K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-28K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-30K	1	SuperPro SPF
Rear	Control Arm Bush Kit IRS Independent Rear Suspension	SPF0611K	1	SuperPro SPF
Rear	Differential Mount Insert suits VR & VS	SPF4170K	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit	SPF0877FK	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit	SPF0877K	1	SuperPro SPF
Rear	IRS Adjusting Kit Toe Only Bush Kit	SPF0877TK	1	SuperPro SPF
Rear	IRS Bush Kit Removal Tool Specialised tool for removal of OE bushings	SPF3211K	1	SuperPro SPF
Rear	IRS Fixed Camber & Adjustable Toe Kit	SPF0877ZK	1	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 12mm	SPF0385-10K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 15mm	SPF1358-10K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 9mm	SPF1358-6K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 12mm	SPF1358-8K	2	SuperPro SPF
Rear	Subframe Front Bush Kit Standard Replacement Kit	SPF3267K	1	SuperPro SPF
Rear	Subframe Front Bush Kit Competition/Race Kit	SPF3367K	1	SuperPro SPF
Rear	Sway Bar Link Lower Bush Kit IRS Independent Rear Suspension	SPF0513-4K	1	SuperPro SPF
Rear	Sway Bar Link Upper Bush Kit	SPF1943K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit IRS	SPF0613-18K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit IRS	SPF0613-19K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit IRS	SPF0613-20K	1	SuperPro SPF