


"When only the best will do, make sure it's SuperPro Blue"

Innovators, not imitators



## Shock Absorber Eye Bushings


### Half Tapered Bushing

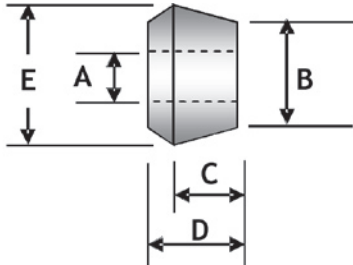

PART #	A	B	C	D	E
SPF0078K	19	31.3	15	20	38
SPF0065-19K	19	40	15	25	46
SPF0065-20K	20	40	15	25	46
SPF0065-22K	22	40	15	25	46
SPF0065-25K	25	40	15	25	46
SPF2148-12K	12	25	12	18	30
SPF2148-15K	15	25	12	18	30
SPF2148-16K	16	25	12	18	30
SPF2148-19K	19	25	12	18	30




### Double Tapered Bushing

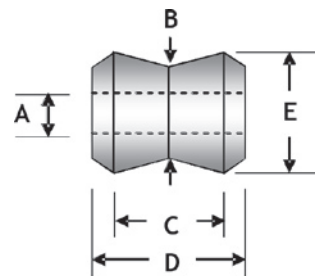

PART #	A	B	C	D	E
SPF2178-12K	12	24.5	24	36	30
SPF2178-15K	15	24.5	24	36	30
SPF2178-16K	16	24.5	24	36	30
SPF2178-19K	19	24.5	24	39	30
SPF1688-19K	19	24.5	25	43	30
SPF1461K	12.5	25.5	19	22	29.5
SPF0066-12K	12	31	34	38	36
SPF0066-14K	14	31	34	38	36
SPF0066-15K	15	31	34	38	36
SPF0066-16K	16	31	34	38	36
SPF0066-19K	19	31	34	38	36
SPF0066-20K	20	31	34	38	36
SPF0066-21K	21	31	34	38	36
SPF0066-22K	22	31	34	38	36
SPF1571-16K	16	32	32	36	37.6
SPF1571-19K	19	32	32	36	37.6
SPF1897K	19	32	29	44	37.6

### Parallel Bushing

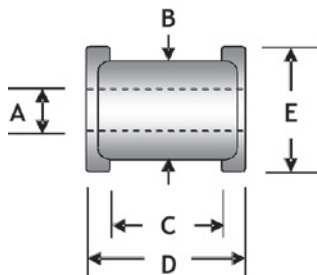

PART #	A	B	C	D	E
SPF0086-16K	16	26	24	36	31
SPF0086-19K	19	26	24	36	31
SPF1460K	13.4	26	7.5	23	29.5
SPF0031K	14.8	26.5	24.5	31.5	30
SPF2212K	19	27	23.5	40	32
SPF0225-16K	16	27.7	24.5	37	32
SPF0225-19K	19	27.7	24.5	37	32
SPF0393K	17	28	22	33.5	34
SPF0390K	19	28	24	39	32
SPF0200K	15	28.5	31	39	32
SPF2319-16K	16	30.6	24.5	40	35
SPF2319-19K	19	30.6	24.5	40	35



Manufactured by

[www.superpropoly.com](http://www.superpropoly.com)

